



MAKING YOUR DREAMS A REALITY

FITTING INSTRUCTIONS

BPSY-0375 Oil Cooler Bracket




For Many people building their RC30 tribute, they will simply remove the oil cooler and hoses and fit the TYGA TPER-0110 Oil Cooler Bypass. However, there are still some that would like to retain their oil cooler.

We have tried to accommodate the oil cooler hardware and have designed a bracket that allows the oil cooler to be mounted to our TYLY-0317 meter stay, while still being able to fit our RC30 style bodywork.

These instructions assume that you have already fitted the TYY-0317 meter stay.

Fitting the bracket is as follows:

- 1)** First job is to remove the horn bracket for clearance to work.
- 2)** Remove the bottom headlight retain screw from both the left and right headlight and offer up the BPSY-0375 bracket in the orientation shown and screw the bracket to the back side of the meter stay using the headlight retaining screws.

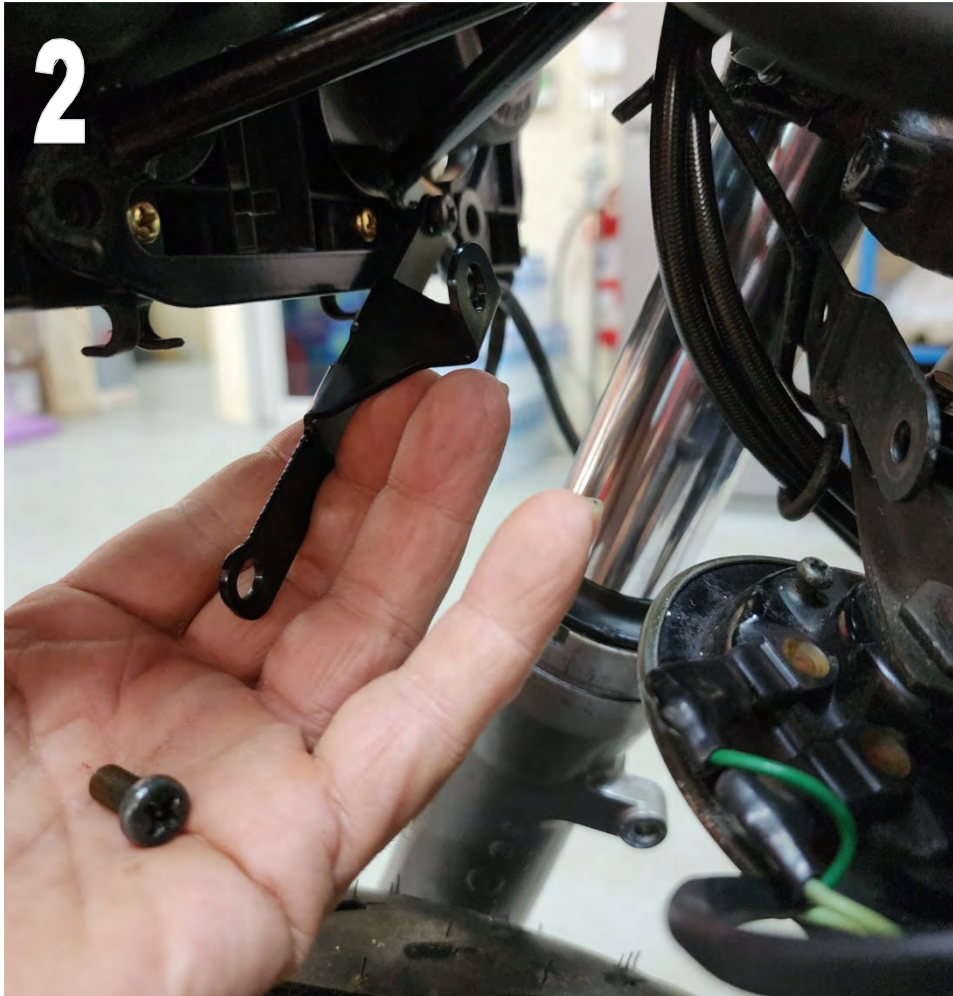

- 3)** Now we need to change the orientation of the bush that is fitted to the oil cooler. Pull out the bush and refit from the other side.



4) Now fit the oil cooler to the bracket using the original RC36 bolt and nut.

Note that it is a little difficult to fit the nut on the back side of the bracket due to a lack of space available.



5) The oil cooler hoses then run down the sides of the radiator as normal and fit to the oil cooler ports on the sump.



Be sure to check clearances and interference when fitting the bodywork

www.tyga-performance.com

Reformatted by Force-V4.com